


Zoom 6000
System Diagram

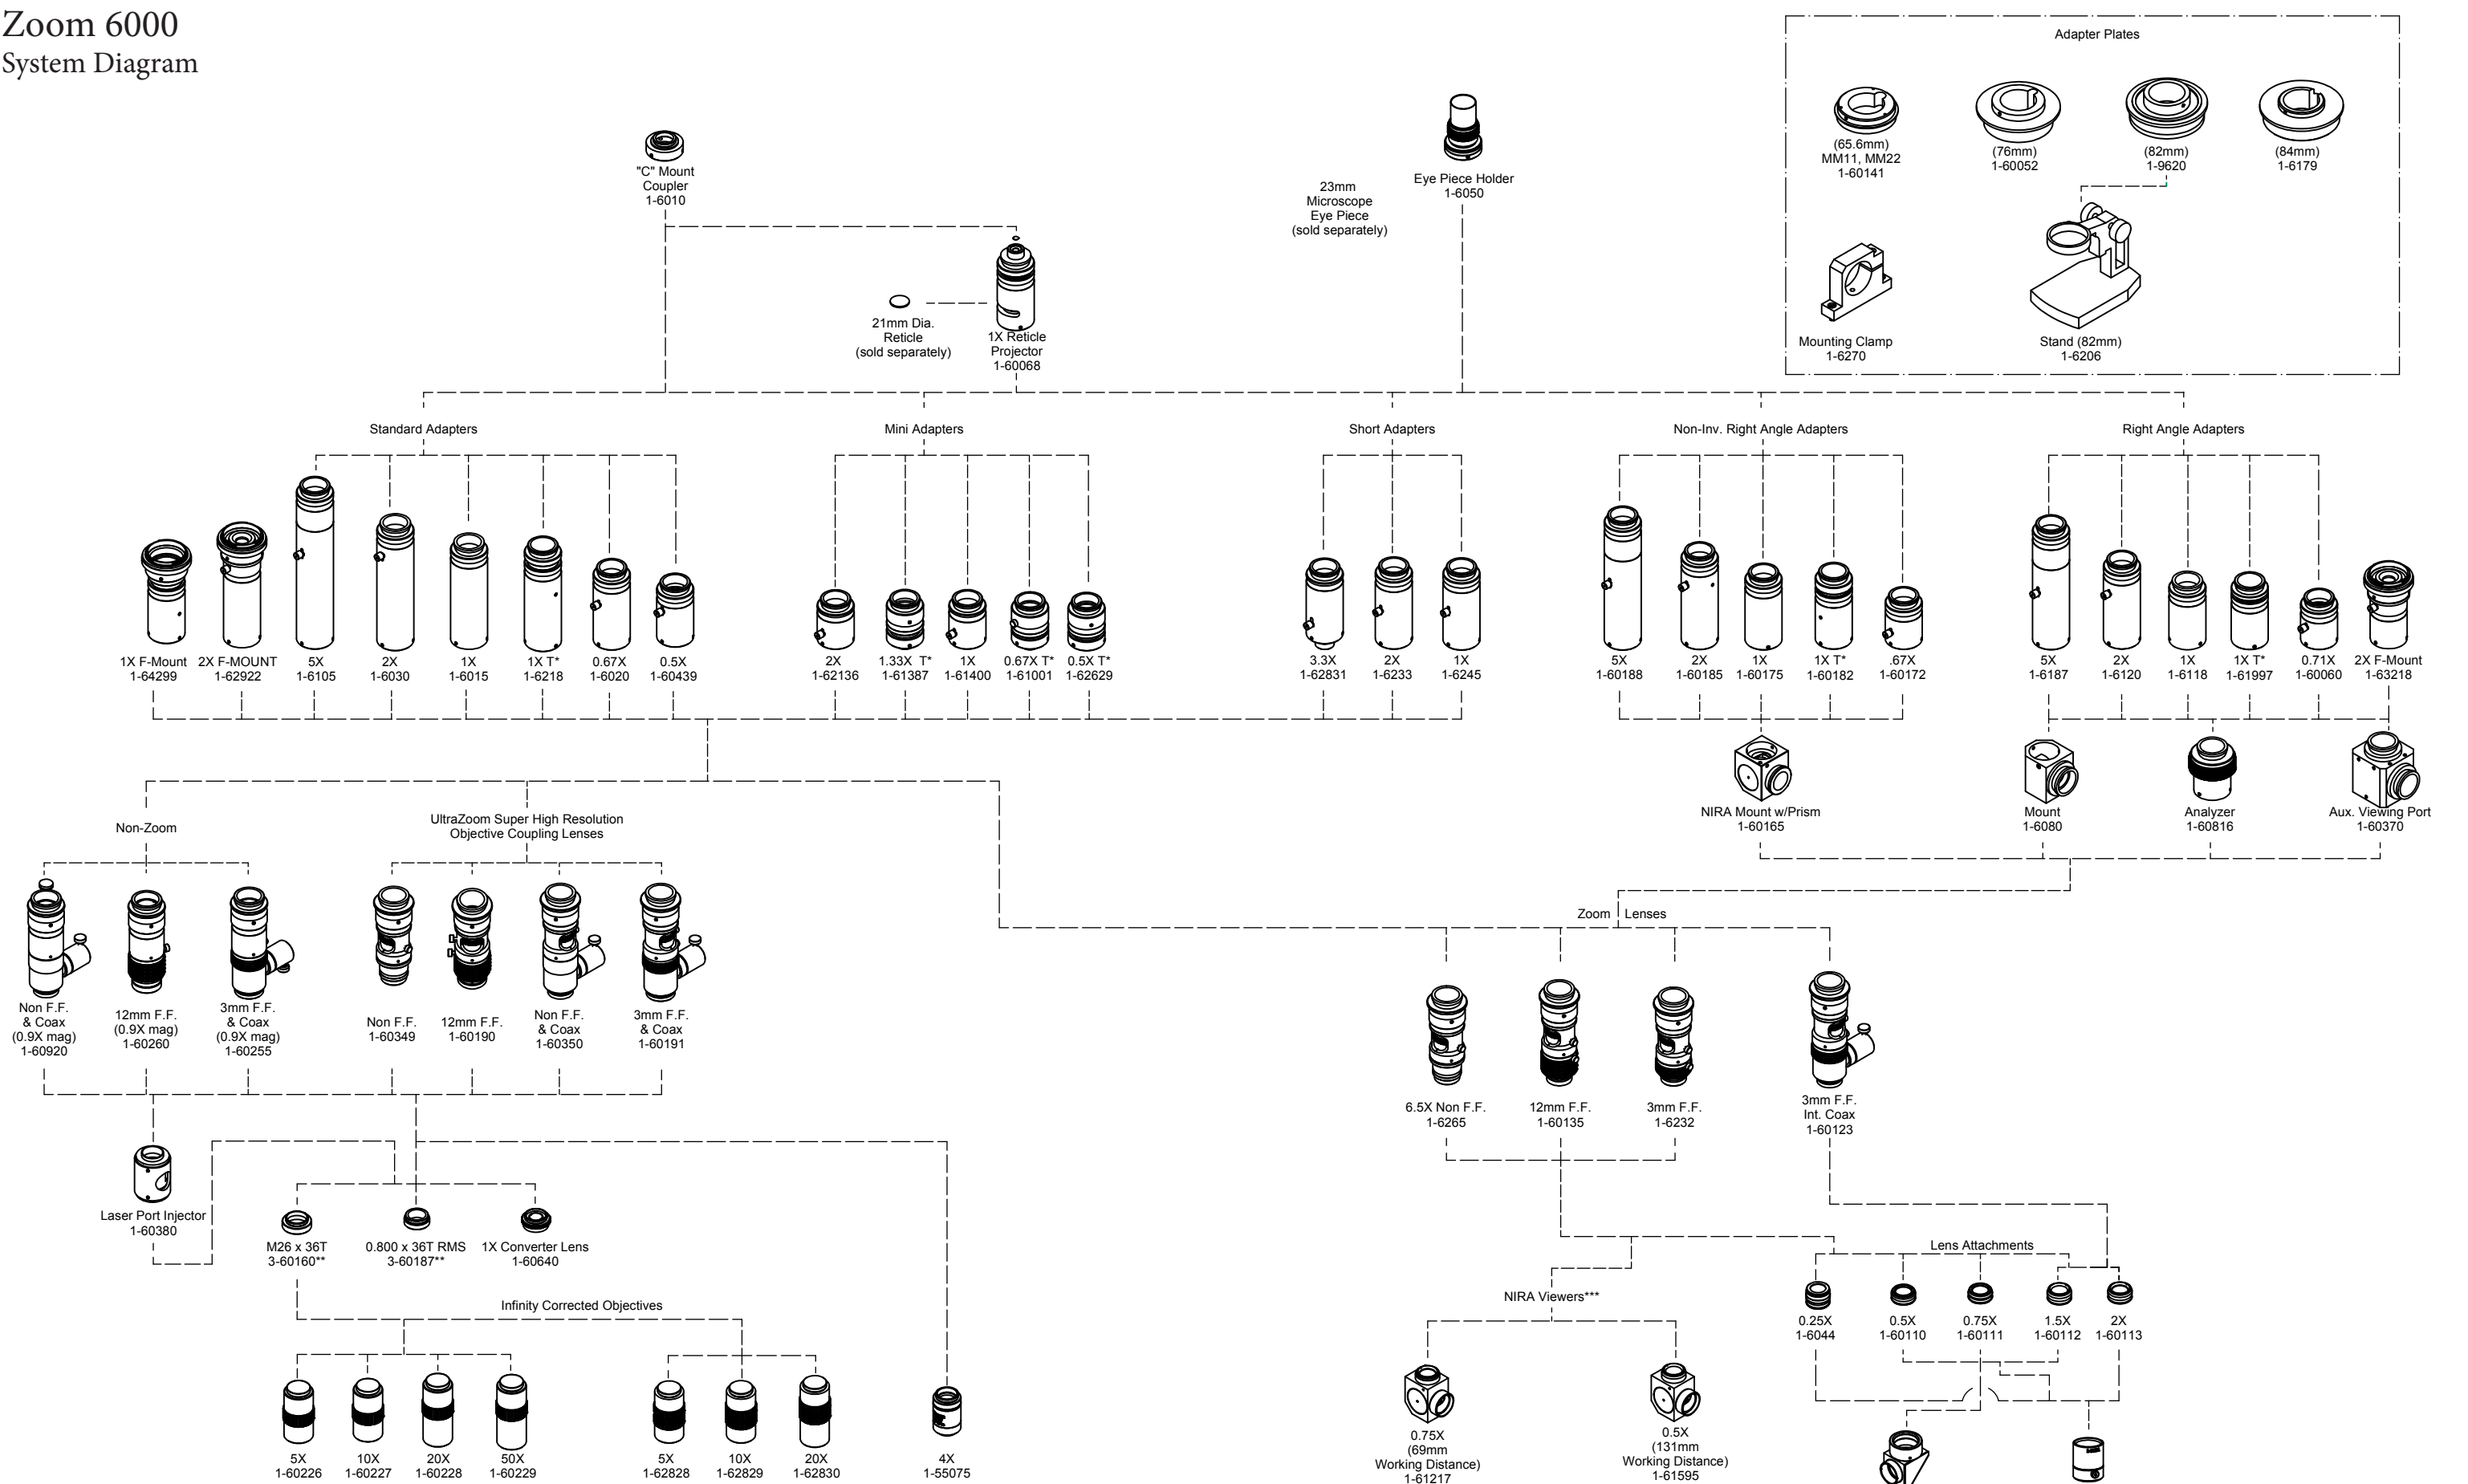

*T = Tele
** Included with UltraZoom
*** Not Used with Internal Coaxial